


**WAGNER**

**FURNO HEAT GUN  
F700 • F750 ELECTRONIC LCD  
HOT AIR MULTI PURPOSE TOOL  
OWNER'S MANUAL**

Model: 2363345

UK

AUS

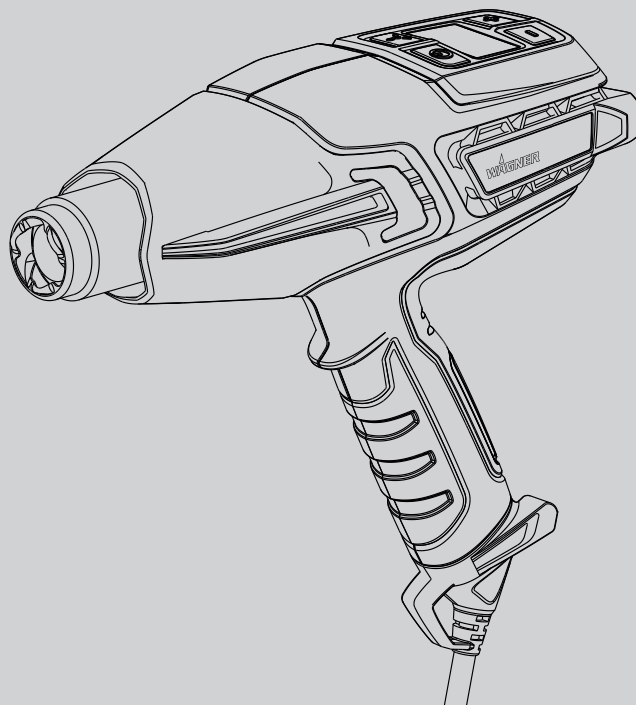

**EN** ..... **3 - 13**

   ..... **16**

## GENERAL SAFETY INSTRUCTIONS

**WARNING!** *Read all safety information, instructions, illustrations and technical data provided with this power tool.* Failure to observe the following instructions may cause electric shock, fire and/or severe injuries. **Keep all safety information and instructions for future reference.** The term “power tool” used in this safety information refers to mains-operated power tools (with power cable) and to battery-powered power tools (without power cable).



This Heat Gun produces extremely high temperatures (as high as 630°C). It must be used with caution to prevent combustible material from igniting.

- Take particular care when working near flammable materials. Remove flammable materials where possible from the work area.
- Always keep a bucket of water or fire extinguisher nearby for safety purposes.
- Keep the Heat Gun in constant motion. Do not stop or dwell in one spot.
- Do not block the ventilation openings and when working maintain a distance of at least 5 cm between the nozzle and the surface so as not to overheat the device. An overheated device cannot be repaired.
- Do not use the device in an atmosphere at risk of explosion.
- Be aware that heat may be transferred to flammable materials that are outside your field of vision.

- Always set the device down on its pedestal and allow it to cool down completely before storing it.
- Never touch the nozzle while it is still hot.
- Do not leave the device unsupervised while it is switched on.
- This device may be used by children aged 8 years and over, as well as by persons with impaired physical, sensory or mental capacities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the dangers arising from it. Children must not play with the device. Cleaning and user maintenance must not be carried out by children without supervision.
- The heat gun and paint become very hot. Wear safety gloves and safety goggles while working to avoid burns.
- Do not direct the hot air flow towards people or animals.
- Do not use the Heat Gun as a hair dryer.



**ATTENTION! When paint is heated, harmful gases and vapours may develop. Always wear suitable respiratory protection and ensure adequate ventilation of the work space.**

- Old layers of paint may contain lead. Paint containing lead must not be removed with a heat gun. If in doubt, have the paint checked by an expert.
- Before every use, check the electrical tool, cable and plug. Do not use the electrical tool if it is damaged. Do not open the electrical tool yourself and only have it repaired by qualified specialist personnel using original spare parts.

- Do not misuse the power cord to carry the power tool, hang up the power tool or pull the plug out of the socket. Keep the power cord away from heat, oil, sharp edges or moving parts. Damaged or entangled power cords increase the risk of an electric shock.
- Keep power tools away from rain or moisture. Water penetrating into a power tool increases the risk of an electric shock.
- If the power tool must be used in a moist environment, use a ground fault circuit interrupter. Using a residual current operated circuit-breaker avoids the risk of electric shock.
- Only use suitable extension cables that are fully intact. A harmonised H05RR-F 3 x 1.0sq mm rubber type cord is required as a minimum for general use.
- Always disconnect the Heat Gun from the power supply when not in use.
- Store the heat gun in a dry location out of the reach of children.
- Keep your workplace clean and well lit.
- Do not over-reach, especially when working on ladders.
- Never use to thaw frozen pipes located inside walls or near combustibles.

### **MAINS CONNECTION (UK only)**

This Heat Gun has been supplied with a fused cordset. This is identified by the fuse holder in the base of the plug. Please read the following safety instructions before use:

1. If the cordset is damaged replace with a new cordset to avoid a safety hazard. Please contact Wagner customer services for a replacement cordset.
2. **NEVER** under any circumstances use the Heat Gun or cordset without the fuse cover fitted. This is the little cover fixed into the base of plug to hold the fuse in place.
3. If you lose the fuse cover then please contact any electrical dealer for a replacement or ring our helpline.
4. A replacement fuse must be rated at 13 Amps. This must be manufactured and approved to BS1362.
5. **IF IN ANY DOUBT PLEASE CONSULT A QUALIFIED ELECTRICIAN.**

### **MAINS CONNECTION (Non-UK)**

This Heat Gun has been supplied with a cordset. If the cordset is damaged replace with a new cordset to avoid a safety hazard. Please contact Wagner customer services for a replacement cordset.

**IF IN ANY DOUBT PLEASE CONSULT A QUALIFIED ELECTRICIAN.**

**WARNING** - Use an extension cord that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. A harmonised H05RR-F 3 x 1.0sq mm rubber type cord is required as a minimum for general use.

## Using the Heat Gun

### General Description


This Heat Gun is a quality power tool. Like any power tool, it can be dangerous when misused. Read the following instructions carefully and follow all safety precautions. It is the responsibility of the owner to use the Heat Gun properly.

### Specifications

|             |                                                              |
|-------------|--------------------------------------------------------------|
| Housing     | Engineered high-impact corrosion and heat-resistant polymers |
| Wattage     | 2000 Watts on HIGH, 150 Watts on LOW                         |
| Voltage     | 220 - 240 V a.c.                                             |
| Frequency   | 50 - 60Hz                                                    |
| Heat Output | Approximately 630 °C on HIGH, approximately 60 °C on LOW     |
| Weight      | 0.9 kg                                                       |

**Features Fig. 1**



- 1) Control panel - temperature and fan speed
- 2) Hanging hook
- 3) Cordset with integrated stabilizers (removable with tool)
- 4) Rear stabilizer fins (upright standing)
- 5) Side bars to prevent nozzle touching surface
- 6) Nozzle Heat Shield

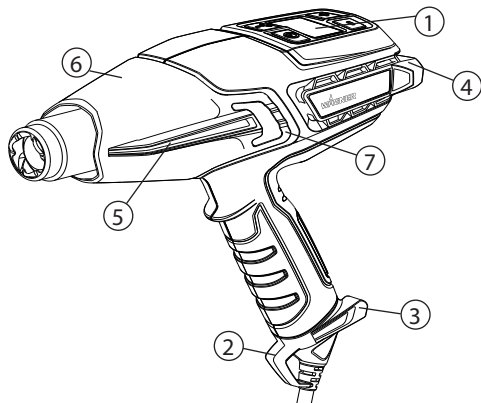**Fig. 1****Removing the barrel cover**

The barrel cover can be removed when working in hard to reach locations. **BE CAREFUL OF THE NOZZLE.** Increased risk of burning exists when working without the barrel cover. To remove the barrel cover, use a small flat head screw driver to lift tab (Fig. 1, 7) over raised area.

**Attaching and Detaching the Cordset**

The cordset (Fig. 2, 1) for the Heat Gun is delivered detached from the gun (Fig. 2, 2). To attach, line up the cord with the socket on the handle of the gun and press firmly together until you hear a click. The cord set does not need to be removed. If required to detach, insert a small flat head screwdriver (Fig. 2, 3) or, similar tool into the hole as shown. Firmly push the screwdriver and tilt it upward (4) towards the handle to release the cordset. Firmly pull the cordset away from the gun.

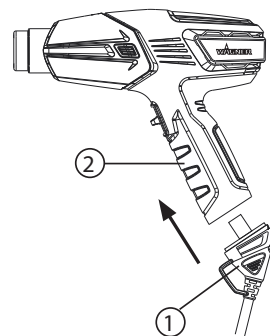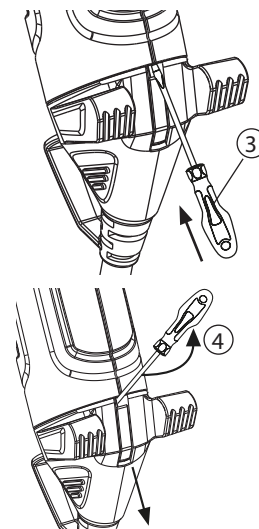**Fig. 2****Attaching****Detaching**


## Touch Pad Control Panel

The heat gun gives you a wide temperature range to choose from, depending upon the type of project. These can be controlled via the Control Panel.

### Temperature Guide LCD Display (Fig. 3)

| Description Fig. 3                                                                           |                                                                               |
|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1) Power button: Turns the heat gun ON and OFF or switches the heat tool into cool down mode | 2) Mode selector: Sets the temperature range and air flow speed you are using |
| 3) Air flow icon                                                                             | 4) Air flow indicator. Fills from right to left                               |
| 5) Text/number display                                                                       | 6) Temperature icon                                                           |
| 7) Temperature indicator. Fills from left to right                                           | 8) Temperature selector: Increase the temperature (+)                         |
| 9) Temperature selector: Decrease the temperature (-)                                        |                                                                               |

Fig. 3

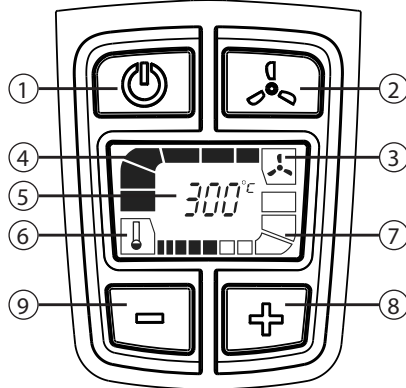


Screen currently shows default start-up display. 300°C at highest fan speed.

### Cool Down Mode (Fig. 4)

While the heat gun is operating, press the power button once to enter cool down mode. When cool down mode is entered, the gun will run for 3 minutes with maximum air flow. During this period, the temperature bars will all flash and step down to indicate cooling. To override cool down mode, press and hold the power button for 2-3s.

Fig. 4

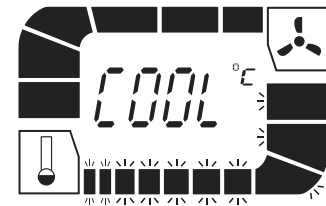

**Following Cool down mode the barrel of the gun will still be hot.**

## Start Up



**Always read the safety information included in this manual before using the Heat Gun.**

1. Plug the Heat Gun into a standard socket-outlet.
2. Turn on the heat gun by pressing the power button on the Control Panel (Fig. 3, 1). When the gun is turned on, it is automatically set to the default temperature of 300°C as shown in Fig. 3.
3. Use the plus and minus buttons (Fig. 3, #8 & #9) to adjust the temperature. Single press to increase temperature in ten degree increments.
4. As the temperature is increased, bars will flash to indicate that the gun is coming up to temperature. As the higher temperature is reached, the bars turn solid.
5. As the temperature is decreased, bars will flash to indicate that the gun is still at a high temperature. As the lower temperature is reached, the bars turn off.

**IMPORTANT: If the blower motor in the heat gun does not turn on when the POWER button is activated, turn the switch OFF immediately. The heating element will burn out if it is not cooled by the blower.**


6. During rest periods or when you are finished with your project, press the power button to enter cool down mode.
7. Set the gun down in an upright position. The heat gun will shut itself off after 3 minutes.
8. To override cool down mode press and hold the power button for 2 to 3 seconds. The gun will power off immediately.

**Note: Smoke may appear during the first start up due to the burning of manufacturing oils. The smoke should disperse shortly after first start up.**

### Hands-free operation Fig. 5

The Heat Gun has an integrated stand (Fig. 1, 4) for bench top applications and for cooling down. Alternatively the heat gun carry case (Fig. 6) has been specifically designed to locate the heat gun in the upright position for work on uneven surfaces.


**Fig. 5**

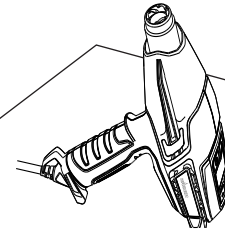



**AngleLoc carry case (only F750)**

The heat gun carry case with AngleLoc has been specifically designed to locate the heat gun in the upright position for work on uneven surfaces.

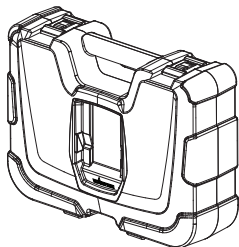

**IMPORTANT:** If the motor-driven fan in the Heat Gun does not turn on when the switch is set to either LOW or HIGH, turn the switch OFF immediately. The heating element will burn out if it is not cooled by the motor-driven fan.

**Note:** Always set the Heat Gun upright after it is turned off, either for a short break or for storage. Avoid laying the unit on the side after shutdown. The heat will remain in the unit and cooling will take longer. Store the unit only after the nozzle is cool. Unplug the unit before storing to prevent accidental start-up.

**IMPORTANT:** Always protect glass when working near windows.



**Do not touch nozzle or any other tool being used when working. These become extremely hot and will cause severe burns. Wear gloves to protect hands from hot scrapings.**

Many variables affect heating applications, such as the material being heated, ambient temperature, the distance from the gun to the substrate and the heating technique. For this reason Wagner has provided temperature guidelines for certain applications. Always start the heat gun at the lowest temperature in the range then raise the temperature until the optimum temperature is achieved. Always keep the heat gun in motion and at least 5cm from the substrate when applying heat.

**AngleLoc mount Fig. 6a & 6b (only F750)**

a: Insert the back of the heat gun so that the rear stabilizing fins locate themselves below the ridges on the side wall of the cavity in the top of the carry case.

b: Then slide the heat gun forward so that it naturally locks into place at a 135 degree angle. The heat gun should now be secure for upright use.

Fig. 6a


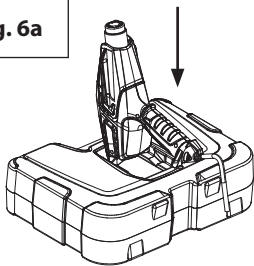


Fig. 6b

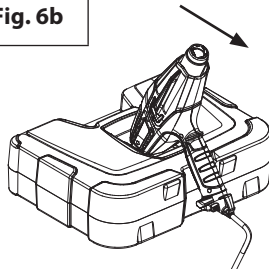

The FURNO 750 Heat Gun is one of the most versatile tools you can own. It can be used for a great variety of projects, from big DIY to small Art & Crafts jobs. For more details on multiple projects and 'how to' videos please visit our website [www.wagner-group.com](http://www.wagner-group.com).

| Use                                  |                                                     | Heat     | Nozzle Tip Options                |
|--------------------------------------|-----------------------------------------------------|----------|-----------------------------------|
| <b>DIY</b>                           | Stripping paint                                     | HIGH     | Concentrator or Wide              |
|                                      | Wall repair                                         | LOW      | Open (no tip)                     |
|                                      | Drying paint                                        | LOW      | Open (no tip)                     |
|                                      | Soften adhesives to remove floor tiles              | LOW      | Wide concentrator                 |
|                                      | Bend plastic, plexiglass, formica                   | LOW/HIGH | Reflector Nozzle                  |
|                                      | Removing formica and linoleum                       | LOW      | Wide concentrator                 |
|                                      | Soften paint, caulking and putty for easier removal | HIGH     | Concentrator or Wide concentrator |
|                                      | Removing varnish                                    | LOW-MED  | Wide concentrator                 |
|                                      | Shrink plastic film for wrapping or weatherproofing | LOW      | Wide concentrator                 |
| <b>Small jobs (including repair)</b> | Loosen rusted nuts, bolts and fittings              | HIGH     | Open/ Concentrator                |
|                                      | Repairing jeans                                     | LOW      | Wide concentrator                 |
|                                      | Burning weeds                                       | HIGH     | Concentrator                      |
|                                      | Removing adhesives                                  | LOW      | Open (no tip)                     |
|                                      | Waxing skis/snowboard                               | LOW      | Wide concentrator                 |
|                                      | Glass fibre work                                    | HIGH     | Concentrator or Wide              |

| Use                      |                                       | Heat           | Nozzle Tip Options        |
|--------------------------|---------------------------------------|----------------|---------------------------|
|                          | Unfreezing pipes and locks            | LOW            | Reflector Nozzle          |
|                          | Lighting a bbq grill                  | HIGH           | Concentrator / BBQ Nozzle |
|                          | Heat shrink tubing/ connectors        | LOW-MED        | Reflector Nozzle          |
|                          | Heat concrete prior to patching       | LOW/HIGH       | Concentrator              |
|                          | Defrosting refrigerator / freezer     | LOW            | Open (no tip)             |
|                          | <b>Art &amp; Crafts</b>               | Making candles | LOW                       |
| Making soap              |                                       | LOW            | Open (no tip)             |
| Shrink wrapping presents |                                       | LOW            | Open (no tip)             |
| Forming foam             |                                       | LOW            | Open (no tip)             |
| Cookie decoration        |                                       | LOW/HIGH       | Open (no tip)             |
| <b>Automotive</b>        | Removing stickers, emblems and decals | LOW            | Open (no tip)             |
|                          | Removing dents                        | HIGH           | Open (no tip)             |
|                          | Removing paint                        | HIGH           | Concentrator or Wide      |
|                          | Applying and removing window tint     | LOW            | Open (no tip)             |
|                          | Restoring bumpers                     | HIGH           | Open (no tip)             |
| <b>Electronics</b>       | Smartphone & tablet repair            | LOW            | Concentrator              |
|                          | PlayStation and Xbox repair           | LOW            | Concentrator              |

## Stripping Paint

The Heat Gun heats up the surface and causes the paint to soften, at which time it can be scraped off easily without damaging the surface. Some paints may soften even though they do not blister; some may become rubbery, and some may require higher heat.


When working with several layers of paint, it speeds up the scraping process to heat the surface thoroughly, all the way to the wood., then all the layers can be scraped at one time.

A soft wire brush may be the best tool to use for very intricate surfaces. Mineral paints and finishes, such as cement paint and porcelain, do not soften with heat, so using a heating tool will not work for paint removal.

### The best method of paint removal

Move the Heat Gun slowly and steadily forward at an angle to the surface, pointing the nozzle in the direction of motion. This allows you to scrape safely outside the hot air stream and keeps the scraper and the scraped surface cooler.

- A. Warm air preheats the surface.
- B. Paint is softened by hot air.
- A + B. Deep penetration of heat over total area.
- C. Paint can be easily scraped off as soon as it is softened and the gun is moved forward.
- D. Stripped surface allowed to cool.

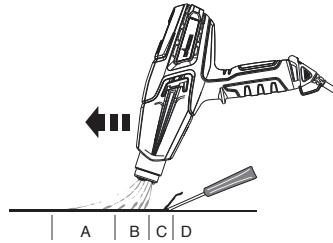

**IMPORTANT: The removal of paint by a Heat Gun is safe if the above guidelines are used, but always keep either a container of water or an ABC fire extinguisher (suitable against Class A, B and C type fires) within reach.**

**Note: Do not use the Heat Gun on surfaces that can be damaged by heat, such as vinyl-coated panelling, vinyl-coated siding or vinyl-coated window frames.**

**When removing paint from window frames, the Heat Gun will soften the putty. Be careful not to gouge the putty with the scraper. The putty will firm up after it cools.**

**Do not use the Heat Gun on insulating laminated window glass such as Thermopane. The glass edge expansion may break the edge seal.**

**When scraping fascia, do not overheat the edges of the asphalt shingles protruding over the edge of the sheathing. Too much heat will melt the asphalt.**

## Cleaning and Maintenance

Keep the intake openings on the housing clean and free of obstructions. Use a soft, dry brush to clean the openings periodically. Use only mild soap and a damp cloth to clean the Heat Gun. Many household cleaners contain chemicals which could seriously damage the housing.

Do not use petroleum, turpentine, lacquer or paint thinner, dry cleaning fluids or similar products when cleaning the Heat Gun.

**NEVER** allow any liquid to get inside the tool or immerse any part of the tool into a liquid.

Cleaning and user maintenance shall not be made by children.





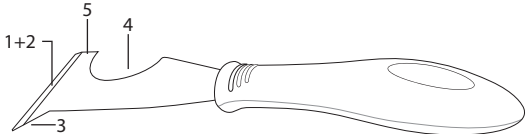

## Storage

Allow the Heat Gun nozzle to cool to room temperature before placing in storage.

The nozzle will turn dark over time because of the high heat. This is normal and will not affect the performance or life of the unit.

## Accessories

The following accessories may come with the Heat Gun or may be purchased separately by visiting [www.wagner-group.com/service](http://www.wagner-group.com/service). Alternatively see back of manual for your nearest Service Centre.
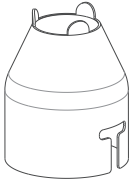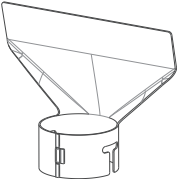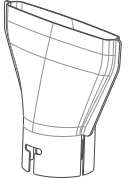
| Name                                                                               | Description                                                                                                                                                                                                                                                         | Name                                                                                                                                                                                                                      | Description                           |                                                                                    |                                                                                                                                                                                  |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Concentrator Nozzle<br>P/N2366222                                                  |                                                                                                                                                                                    | Directs a concentrated heat flow to the work surface. Ideal for removing paint in awkward corners, crevices, mouldings, beading or architraves.                                                                           | Glass Protection Nozzle<br>P/N2366224 |  | Deflects the heat away from glass or other fragile areas. Ideal for window sills, ledges, frames and skirting boards.                                                            |
| Wide Concentrator Nozzle<br>P/N2366223                                             |                                                                                                                                                                                    | Directs a long, narrow heat pattern to the work surface. Ideal for removing paint or varnish from large, flat surfaces such as skirting boards, doors, stairs, etc. It should be used in conjunction with a flat scraper. | Reflector Nozzle<br>P/N2366225        |  | Disperses the heat flow evenly around the whole work surface. Ideal for thawing frozen pipes, solder pipe work, bending plastics or heat shrinking electrical insulating tubing. |
| <b>Name</b>                                                                        | <b>Description</b>                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                           |                                       |                                                                                    |                                                                                                                                                                                  |
|    | 5-in-1 Detailed Scraper Tool<br>P/N2366227                                                                                                                                                                                                                          |                                                                                                                                                                                                                           |                                       |                                                                                    |                                                                                                                                                                                  |
|  | Carry Case<br>P/N2366226                                                                                                                                                                                                                                            |                                                                                                                                                                                                                           |                                       |                                                                                    |                                                                                                                                                                                  |
|                                                                                    | This tool has 5 functions. The blade is used to (1) scrape paint and (2) spread compound. The gouge point (3) is used to remove putty/caulk from open cracks. The curved area (4) is used to clean roller covers. The flat side (5) can be used to open paint tins. |                                                                                                                                                                                                                           |                                       |                                                                                    |                                                                                                                                                                                  |
|                                                                                    | The heat gun carry case with AngleLoc has been specifically designed to locate the heat gun in the upright position for work on uneven surfaces.                                                                                                                    |                                                                                                                                                                                                                           |                                       |                                                                                    |                                                                                                                                                                                  |

**IMPORTANT: Always use gloves when handling the Heat Gun.**

**To attach an optional item to the Heat Gun:**

1. Set the Heat Gun upright on a level surface and wait until the tip is cool.
2. Set the item onto the tip of the Heat Gun and push firmly into place by hand.

**To remove an optional item from the Heat Gun:**

1. Set the Heat Gun upright on a level surface and wait until the tip is cool.
2. Pull the item off the tip.

### 3+1 years guarantee

In addition to the statutory warranty for this product, J. Wagner GmbH, based in 88677 Markdorf, Germany, grants you a guarantee (device guarantee) of 36 months for this product. This guarantee is extended by a further 12 months if the product is registered within 28 days of purchase on the Internet at <https://go.wagner-group.com/3plus1>.

The guarantee includes the free repair of defects which are demonstrably caused by the use of unsuitable materials in the product's manufacture or by assembly errors, as well as the free replacement of faulty components provided there are no guarantee exclusions.

The statutory material defect rights to which you as the purchaser are entitled for the intended purpose from the time of handover of the purchased item are not restricted by the guarantee. The guarantee, along with your statutory warranty rights, will expire if the device has been opened by persons other than authorised WAGNER service personnel. The detailed guarantee conditions can be obtained on request from our authorised WAGNER partners (see website or operating instructions) or in text form on our website:

<https://go.wagner-group.com/hf-warranty-conditions>



- Modifications reserved -

### INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT KNOWN AS WEEE



The device and all accessories and packaging have to be recycled in an environmentally friendly manner. Do not dispose of the appliance with household waste. Support environmental protection by taking the appliance to a local collection point or obtain information from a specialist retailer.

### EU Declaration of conformity

We declare under sole responsibility that this product conforms to the following relevant stipulations:

2014/35/EU, 2014/30/EU, 2011/65/EU, 2012/19/EU

Applied harmonised norms:

EN 60335-1, EN 60335-2-45, EN 55014-1, EN 55014-2,  
EN IEC61000-3-2, EN 61000-3-3, EN 62233

The EU declaration of conformity is enclosed with the product. If required, it can be re-ordered using order number **2389337**.

## **UKCA Declaration of conformity**

We declare under sole responsibility that this product conforms to the following relevant regulations:

Electrical Equipment (Safety) Regulations 2016

Electromagnetic Compatibility Regulations 2016

The Restriction of the Use of Certain Hazardous Substances in

Electrical and Electronic Equipment Regulations 2012

Applied harmonised standards

BS EN 60335-1:2012+A15:2021, BS EN 60335-2-45:2002+A2:2012,

BS EN IEC 55014-1:2021, BS EN IEC 55014-2:2021, BS EN IEC 61000-3-

2:2019+A1:2021, BS EN 61000-3-3:2013+A2:2021, BS EN 62233:2008

**DE J. WAGNER GMBH**  
Otto-Lilienthal-Str. 18  
D-88677 Markdorf  
T +49 0180 - 55 92 46 37  
F +49 075 44 -5 05 11 69

**SK E-CORECO SK S.R.O.**  
Kráľovská ulica 8/7133  
SK-927 01 Šaľa  
T +42 1948882850  
F +42 1313700077

**CZ E-CORECO S.R.O.**  
Na Roudné 102  
CZ-301 00 Plzeň  
T +42 734 792 823  
F +42 227 077 364

**AU WAGNER SPRAYTECH AUSTRALIA PTY. LTD.,**  
8 – 10 Dansu Court  
Hallam, Victoria, 3803  
T +61 3 95 87 - 20 00  
F +61 3 95 80 - 91 20

**FR WAGNER FRANCE S.A.R.L.**  
12 Avenue des Tropiques  
Z.A. de Courtaboeuf  
F-91978 Les Ulis Cedex  
T +33 0825 011 111  
F +33 (0) 1 69 81 72 57

**GB UK IMPORTER WAGNER SPRAYTECH (UK) LTD**  
Innovation Centre  
Silverstone Park, Silverstone  
Northants NN12 8GX  
T + 44 (0) 1327 368410

**H DINOCOOP KFT.**  
Radvány u. 24.  
1118 Budapest  
T +36 1 3193064  
F +36 1 3193066

**E MAKIMPORT HERRAMIENTAS, S.L.**  
C/ Méjico nº 6  
Pol. El Descubrimiento  
E-28806 Alcalá de Henares (Madrid)  
T +34 902 199 021 / +34 91 879 72 00  
F +34 91 883 19 59

**DK ORKLA HOUSE CARE DANMARK A/S**  
Stationsvej 13  
3550 Slangerup  
DK-Danmark  
T +45 47 33 74 00  
F +45 47 33 74 01

**DK DVA A/S**  
Marielundvej 48 C  
2730 Herlev  
DK-Danmark  
T +45 70 234 239

**PL PUT WAGNER SERVICE**  
ul. E. Imieli 27  
PL-41-605 Swietochlowice  
T +48 32 - 346 37 10  
F +48 32 - 346 37 13

**NO ORKLA HOUSE CARE NORGE AS**  
Nedre Skøyen vei 26,  
PO Box 423, Skøyen  
N-0213 Oslo  
T +47 22 54 40 19

**S ORKLA HOUSE CARE AB**  
Box 133  
564 23 Bankeryd  
SV-Sweden  
T +46(0)36 37 63 00

**RO ROMIB S.R.L.**  
str. Poligonului nr. 5 - 7  
ROM-100070 Ploiesti, judet Prahova  
T +40-344801240  
F +40-344801239

**CH J. WAGNER AG**  
Industriestraße 22  
CH-9450 Altstätten  
T +41 71 - 7 57 22 11  
F +41 71 - 7 57 23 23

**I FHC SRL**  
Via Stazione 94,  
26013 Crema (CR)  
T 0373 204839  
F 0373 204845

Material No. 2366232 B  
08/2022

Not responsible for errors and changes.

© Copyright by J.Wagner GmbH